 
 
 

 

 


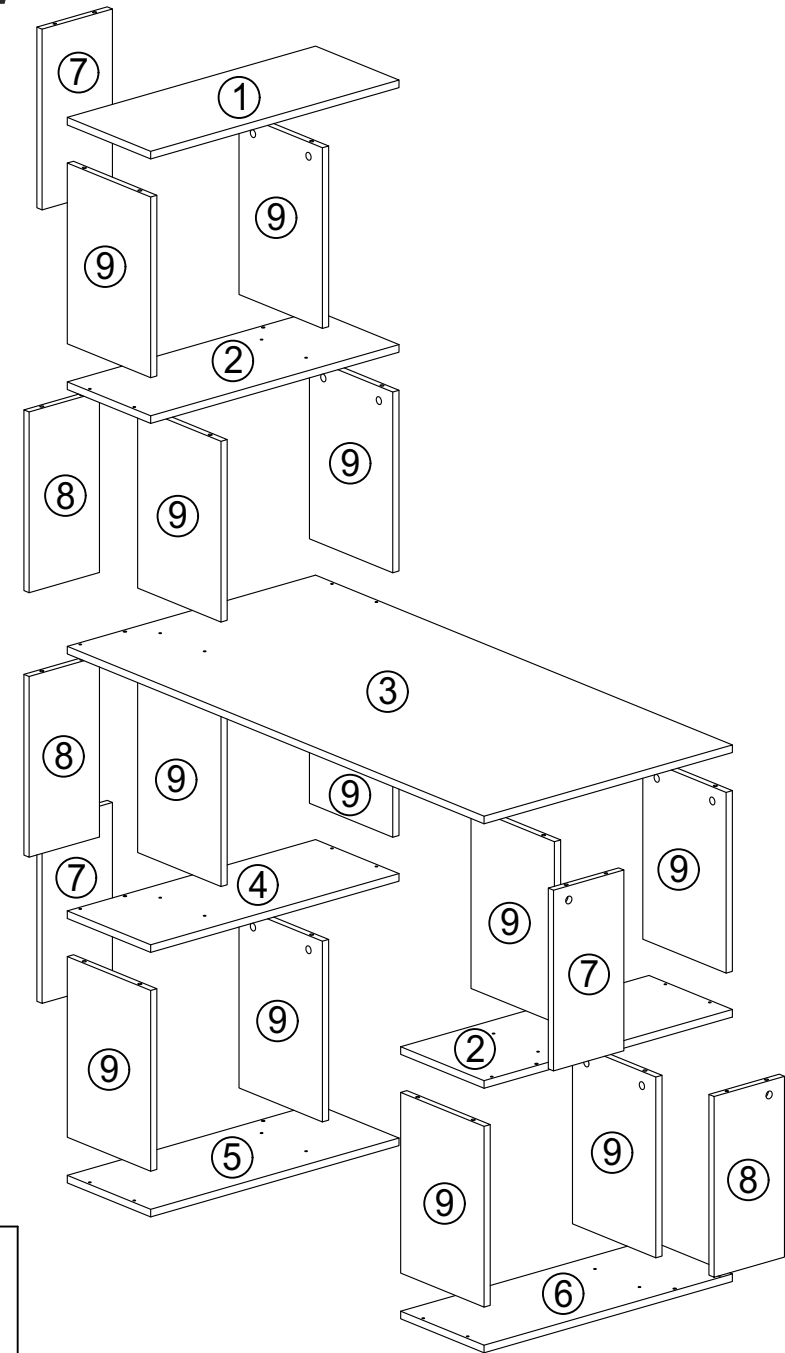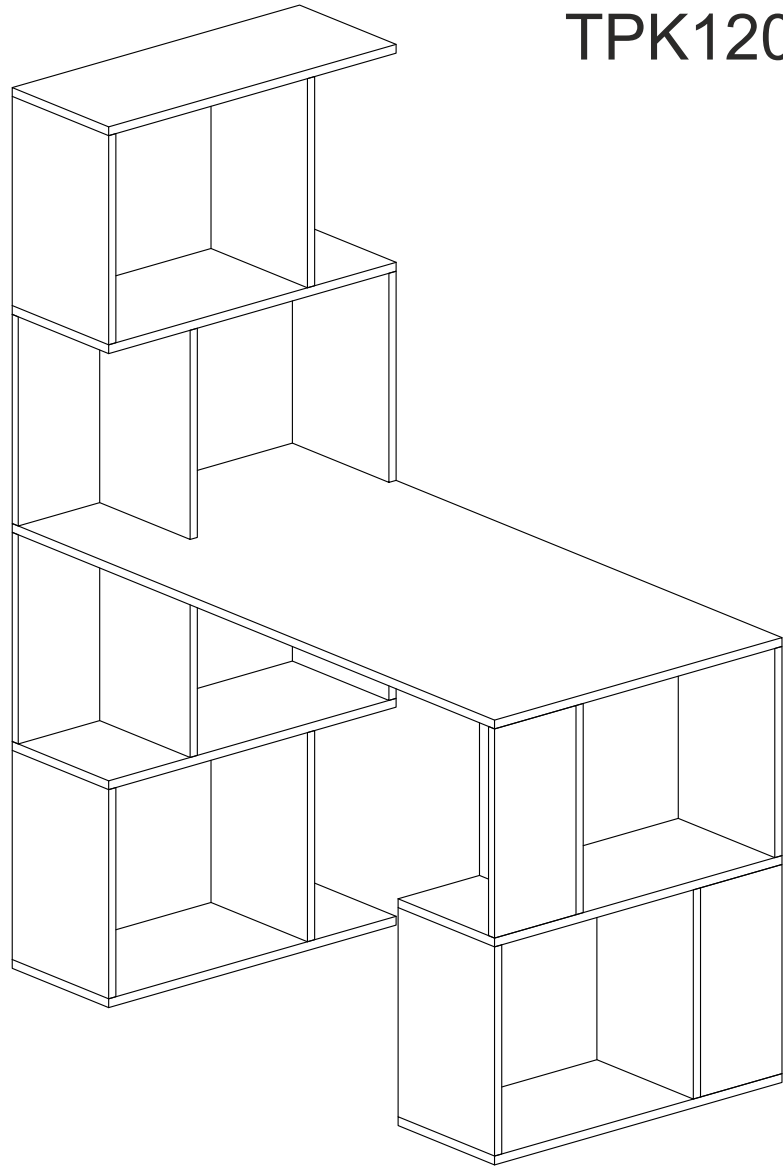

FLOKI NEW


TPK12060150

Montážny návod




A  x30ks	B  x30ks	C  x10ks	D  x1ks	E  x30ks	F  x45ks	G  x10ks
---	--	--	---	---	--	--

 
Krok 1

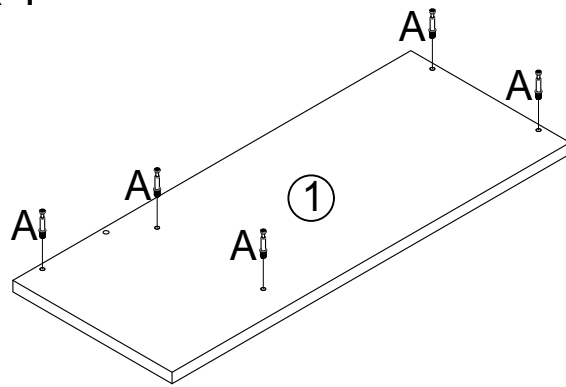


Krok 2

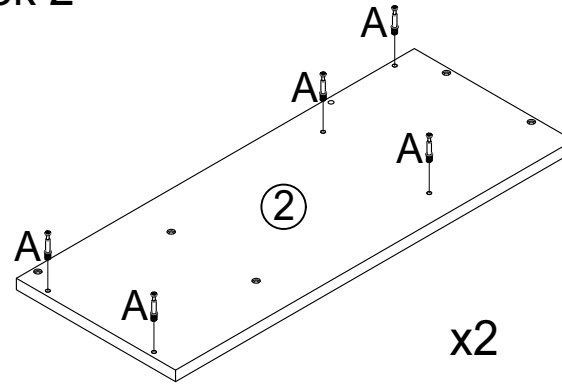 


Krok 3

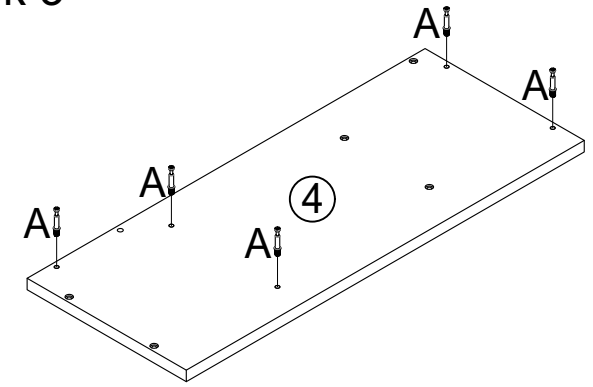 


Krok 4

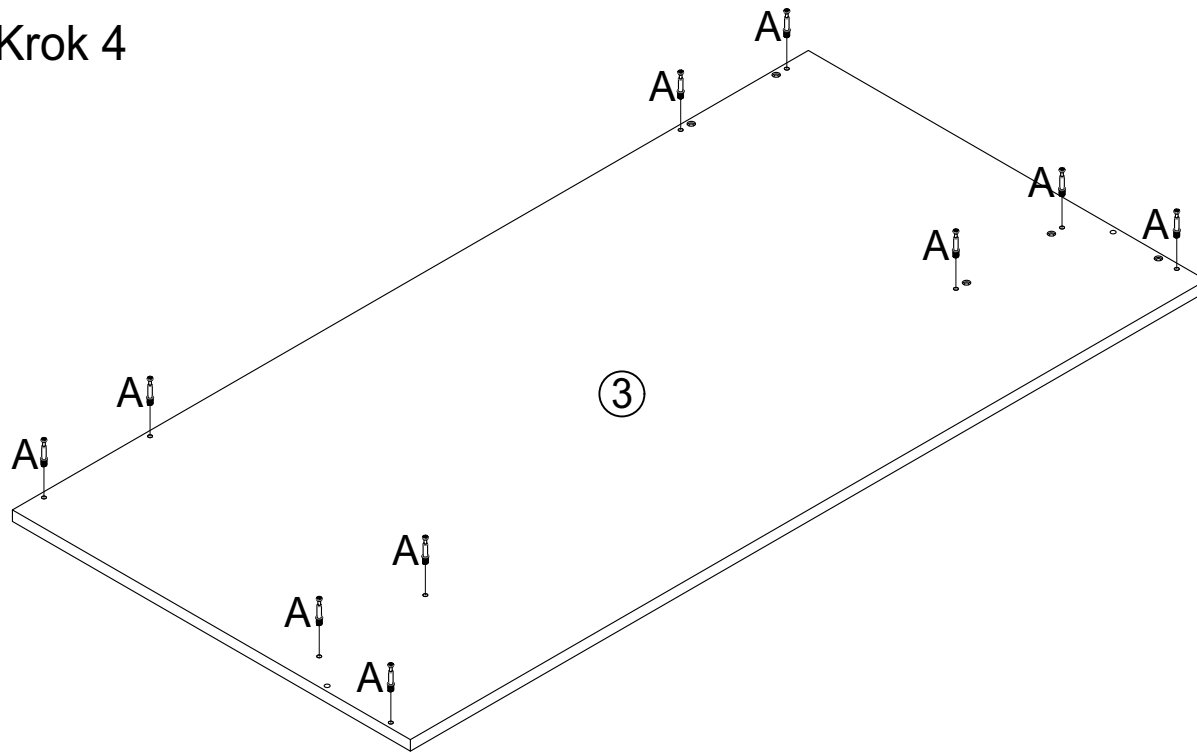 


Krok 5

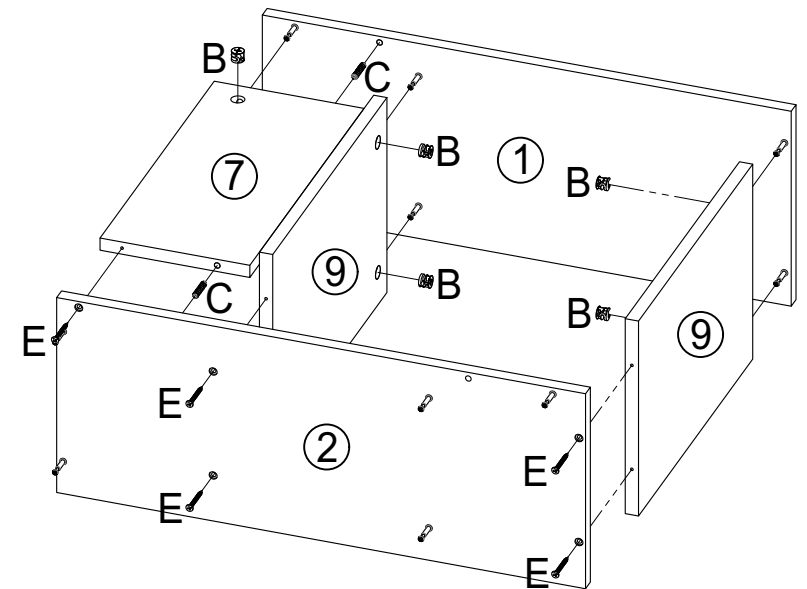 


Krok 6

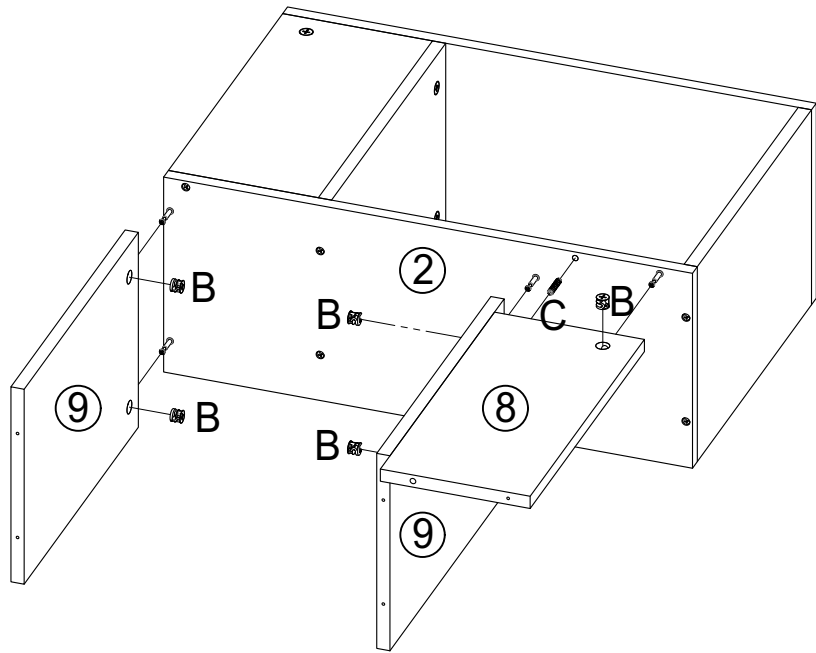 


Krok 7

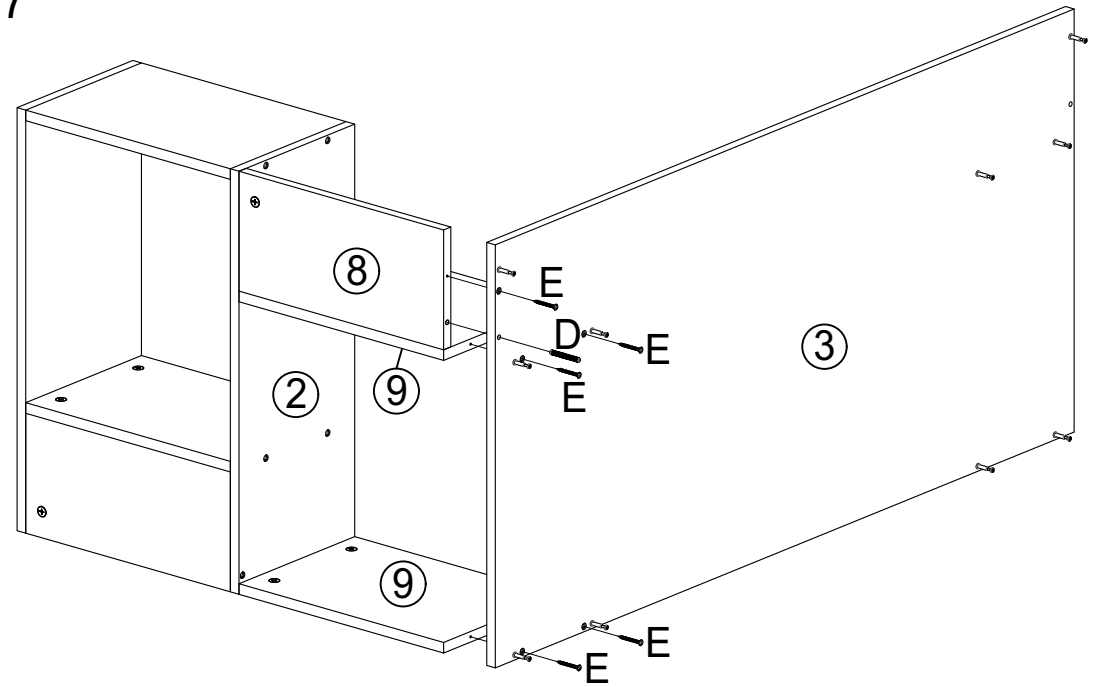 


Krok 8

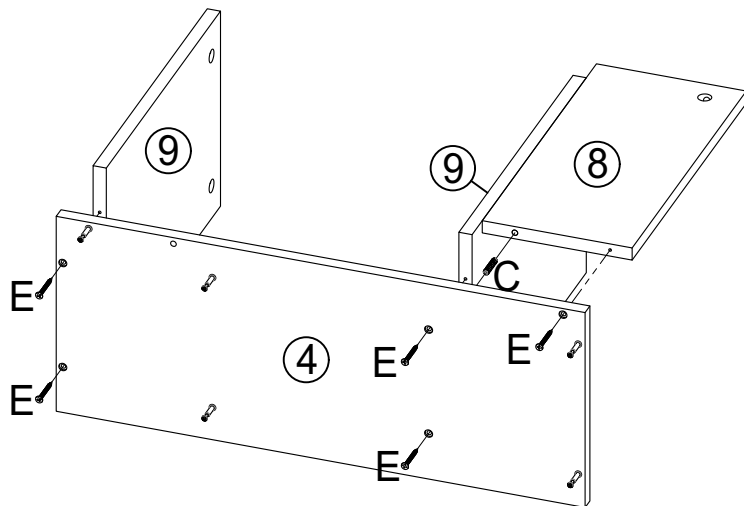 


Krok 9

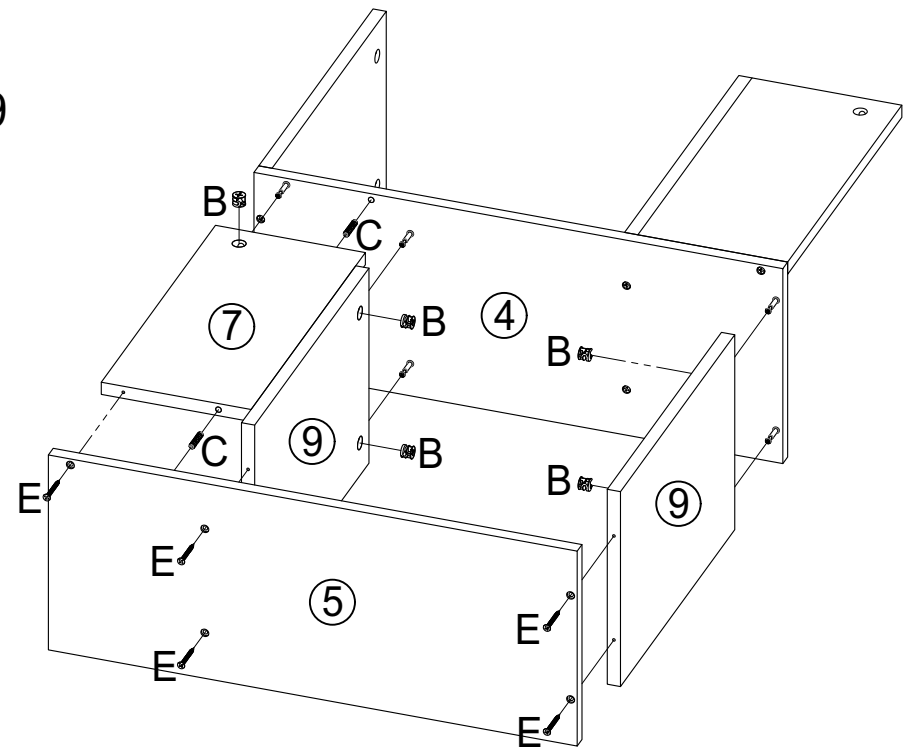 


Krok 10

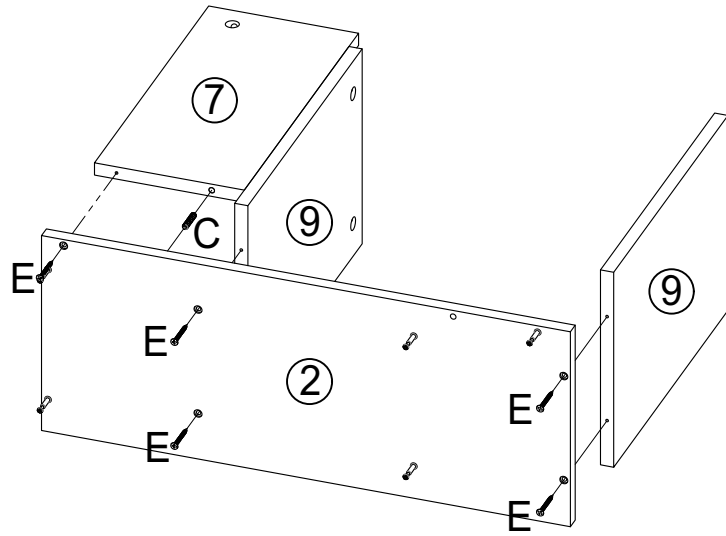 


Krok 11

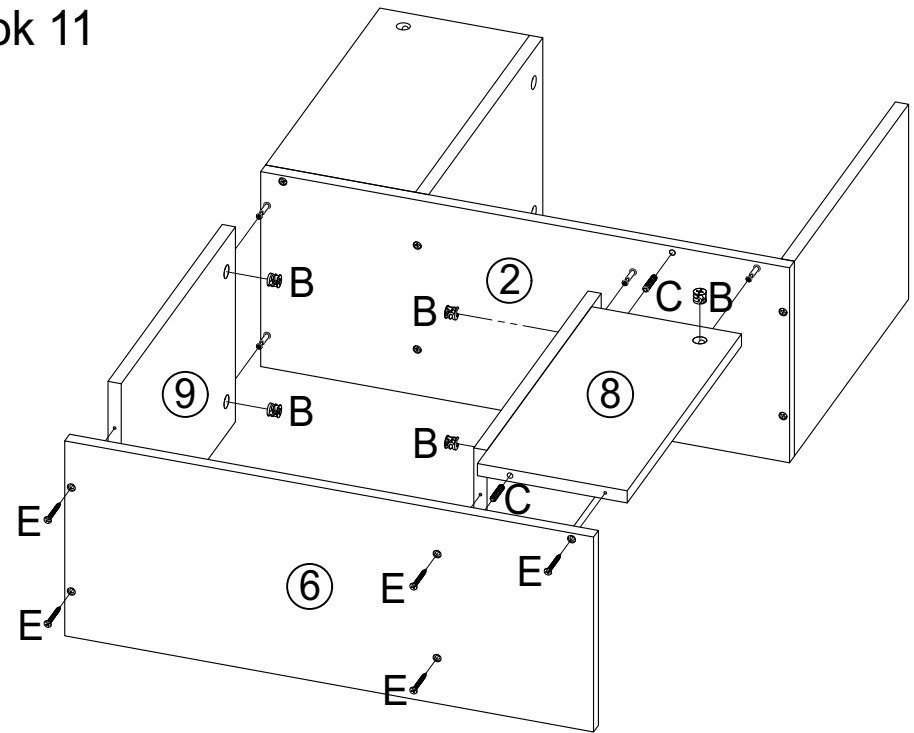 

Krok 12

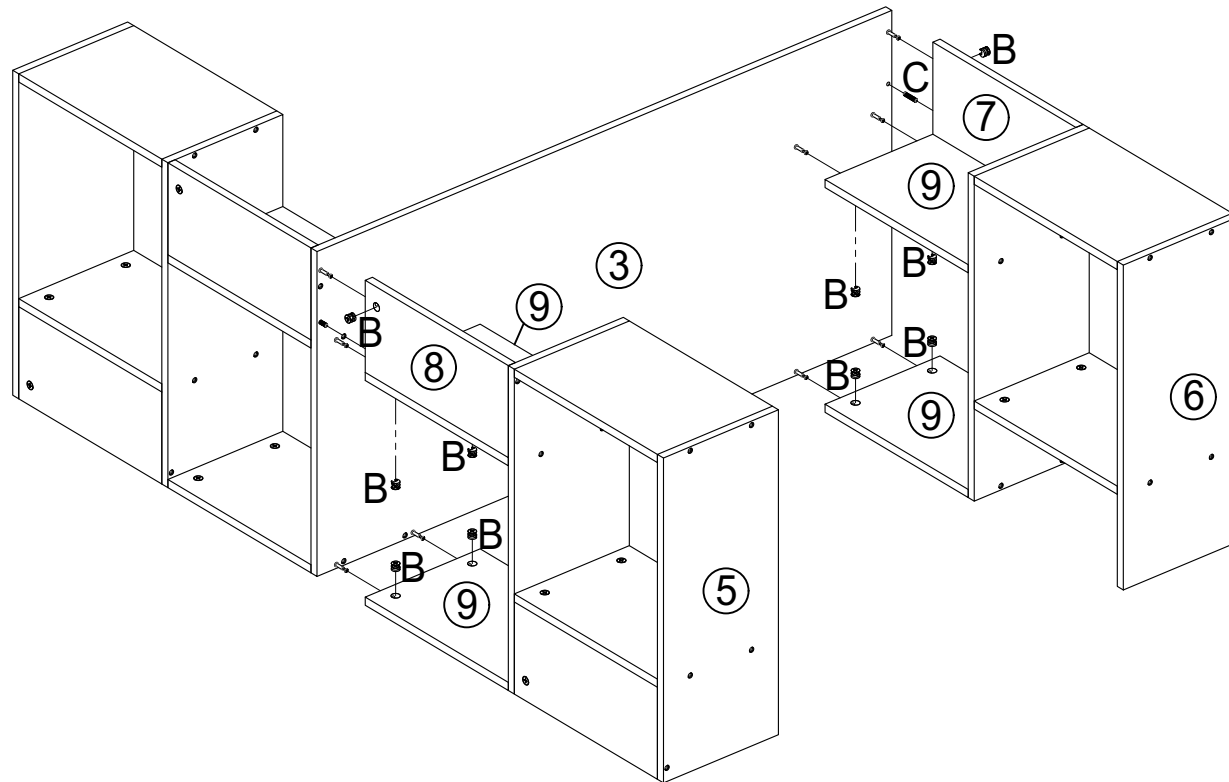 

Krok 13

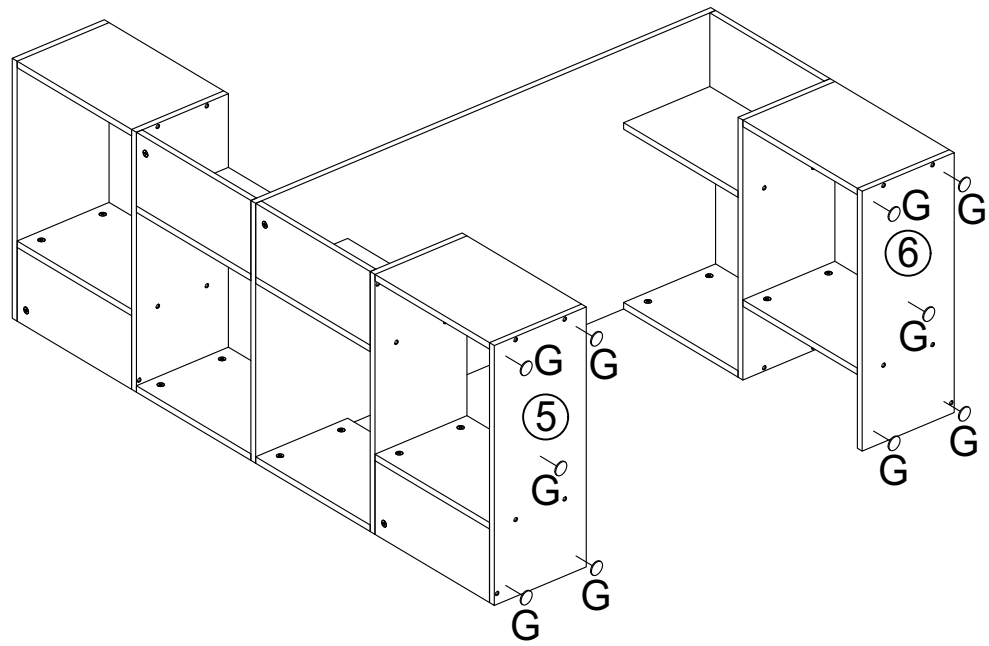 

Krok 14

