
 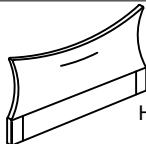
 
 



ASSEMBLY INSTRUCTION


MODEL: SIERRA 180

NO	PART LIST	QTY
A	 HEAD BOARD	1 pc
B	 FOOT BOARD	1 pc
C	 SIDE RAIL R&L	2 pcs
D	 LEG	4pcs
E	 CENTER RAIL	2 pcs
F	 SLAT SUPPORT	6 pcs
G	 SLAT	1 pc

Step 1

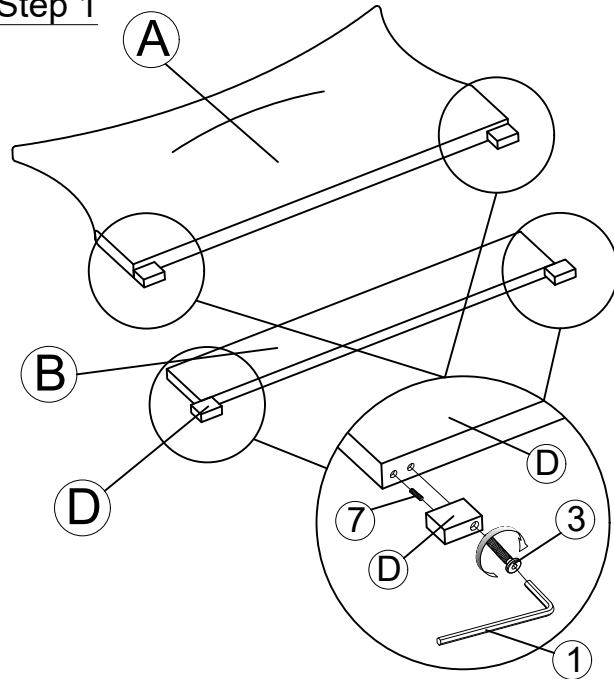


Step 2

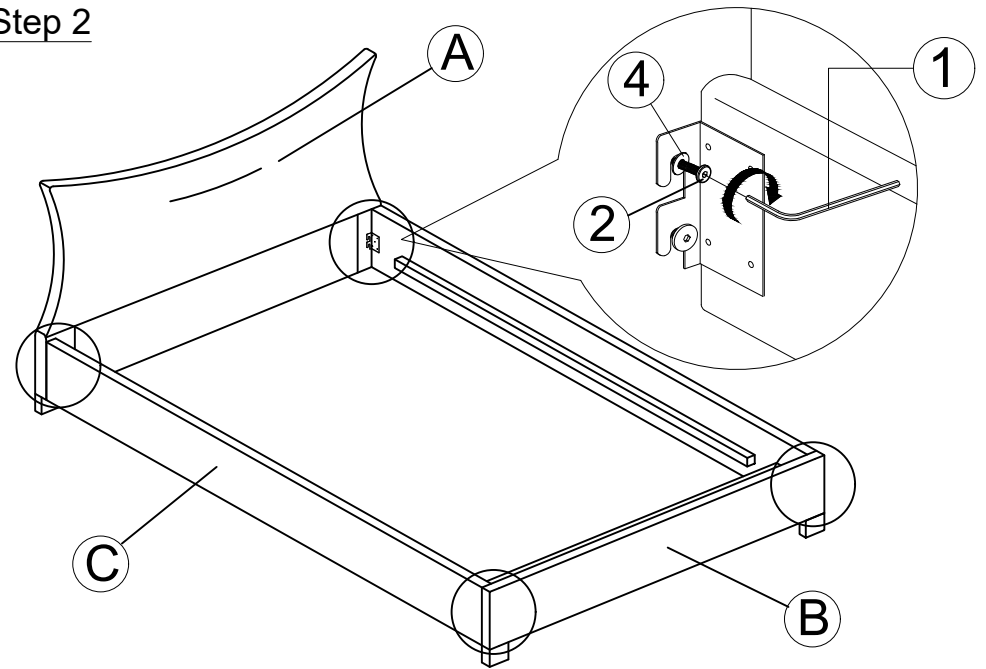

NO	HARDWARE LIST	QTY
1	 ALLEN KEY M4	1 pc
2	 JCBC M6 x 30mm	8 pcs
3	 JCBC M6 x 60mm	10 pcs
4	 FLAT WASHER M6 1/4	8 pcs
5	 CSK M4 x 32mm	26 pcs
6	 ADJUSTABLE BUTTON	6 pcs
7	 WOOD DOWEL M10 x 30mm	4 pcs

Step 3

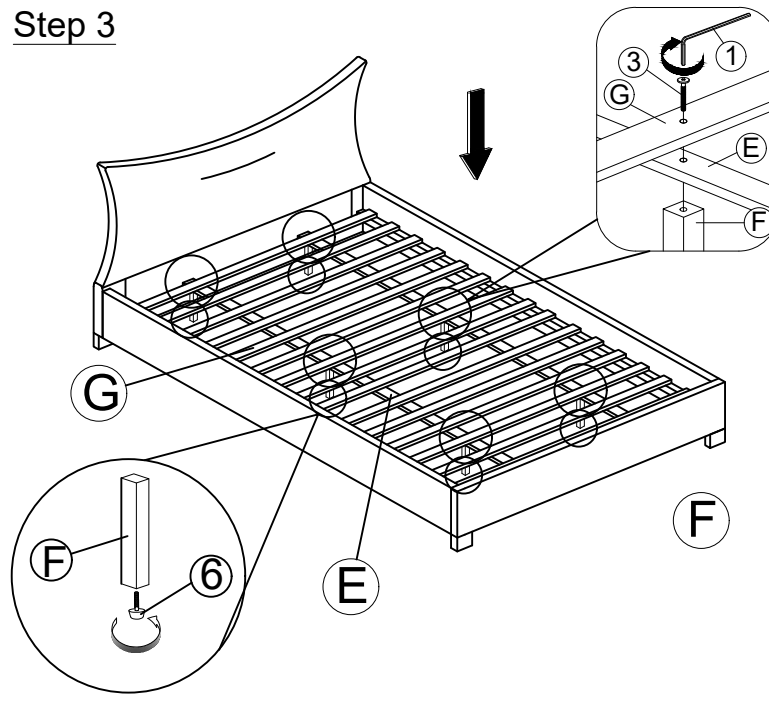

Step 4

