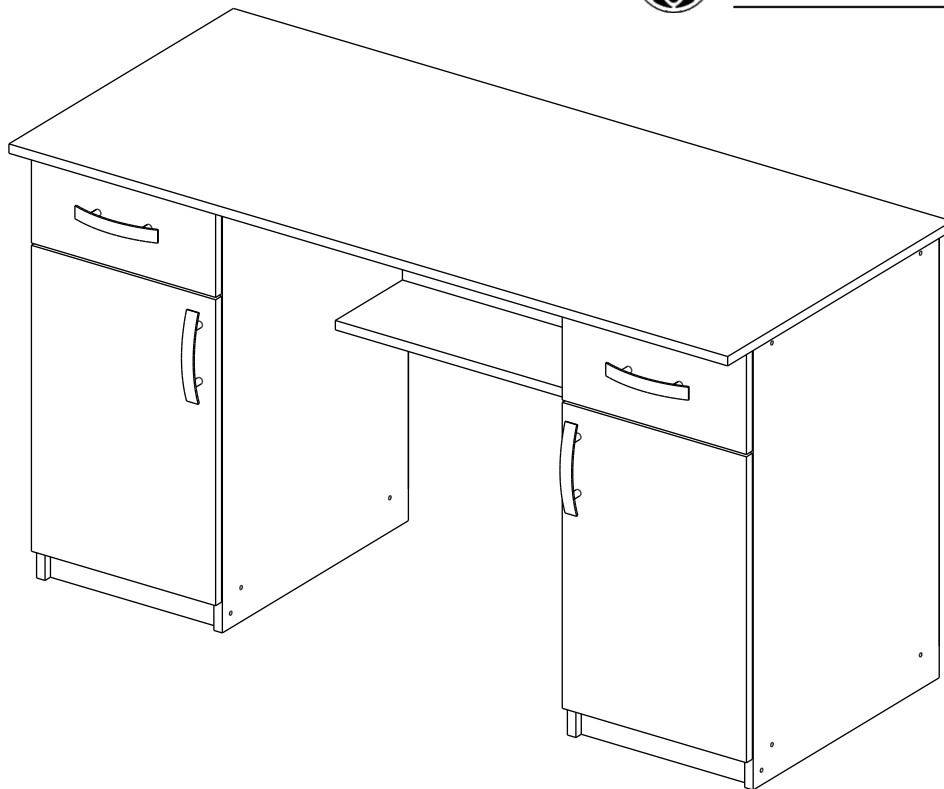
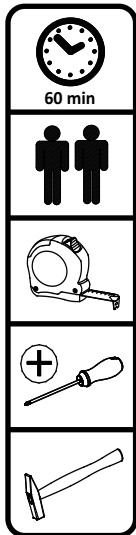
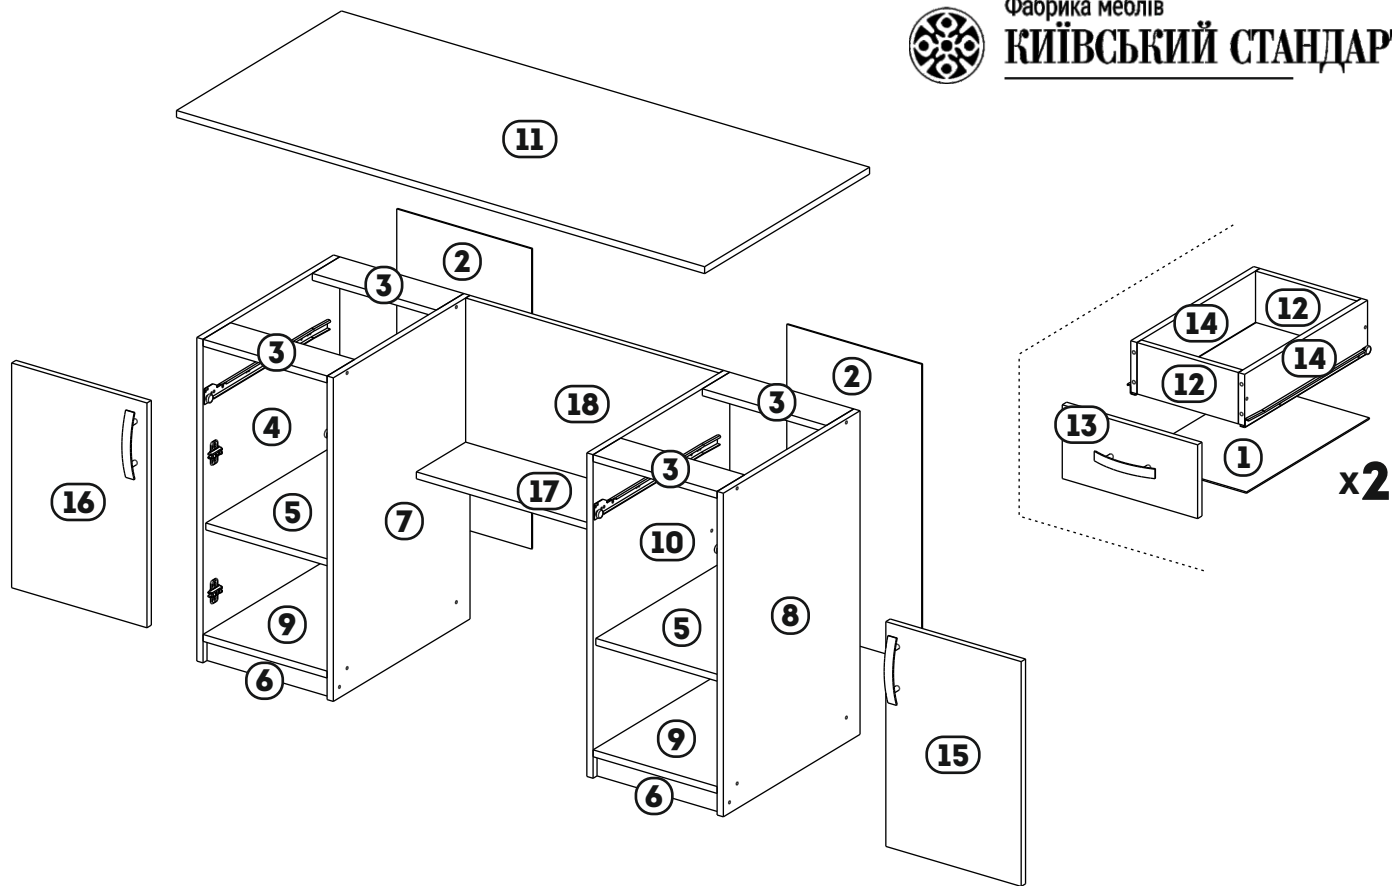










Фабрика меблів  
**КИЇВСЬКИЙ СТАНДАРТ**



**СТІЛ Е-02**



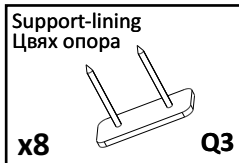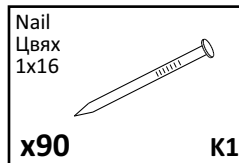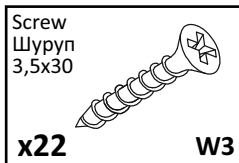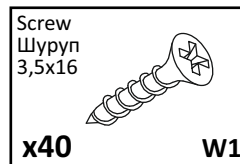
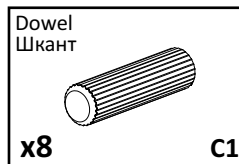
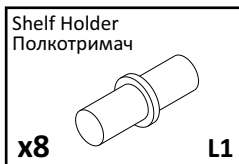
№	a*b	X
1	292x450	2
2	696x346	2
3	318x100	4
4	750x500	1
5	318x490	2
6	50x318	2
7	750x500	1
8	750x500	1
9	318x500	2
10	750x500	1
11	1350x600	1
12	260x119	4
13	171x347	2
14	450x119	4
15	521x347	1
16	521x347	1
17	650x180	1
18	350x650	1





Фабрика меблів

**КИЇВСЬКИЙ СТАНДАРТ**

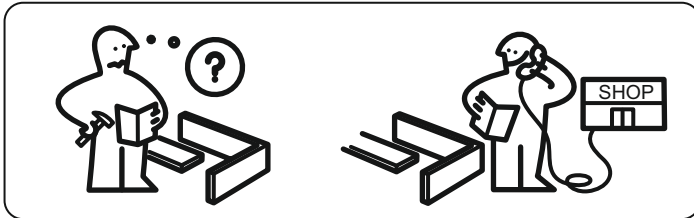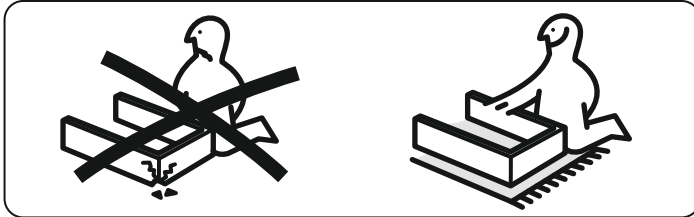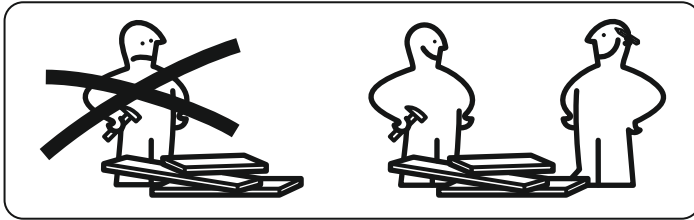

[kievstandart.com](http://kievstandart.com)

## ЗАГАЛЬНІ ТЕХНІЧНІ ВКАЗІВКИ ПО ЗБИРАННЮ МЕБЛІВ

- ПЕРЕД ЗБИРАННЯМ ПЕРЕВІРТЕ КОМПЛЕКТНІСТЬ ДЕТАЛЕЙ ТА ФУРНИТУРИ.
- ДЛЯ ЗБИРАННЯ МЕБЛІВ РЕКОМЕНДУЄМО СКОРИСТАТИСЬ ПОСЛУГАМИ КВАЛІФІКОВАНИХ СПЕЦІАЛІСТІВ.
- ДЛЯ ЗАПОБІГАННЯ ПОДРЯПИН ВИКОНУЙТЕ ЗБИРАННЯ НА ПОВЕРХНІ, ЯКА НАКРИТА ТКАНИНОЮ АБО КАРТОНОМ.

## ПРАВИЛА ДОГЛЯДУ ТА ЕКСПЛУАТАЦІЇ

- БЕРЕЖІТЬ МЕБЛІ ВІД ДОВГОГО КОНТАКТУ З ВОДОЮ ЧИ З ГАРЯЧОЮ ПАРОЮ.
- ЗАБЕЗПЕЧТЕ ДОСТАТНЮ ВІДСТАНЬ ВІД ЕЛЕКТРИЧНИХ ПРИЛАДІВ ТА ОБІГРІВАЧІВ.
- У РАЗІ ПОЯВИ БРУДУ НА МЕБЛЯХ ВИДАЛЯЙТЕ ЙОГО ВОЛОГОЮ ТКАНИНОЮ ІЗ НАСТУПНИМ ВИТИРАННЯМ НАСУХО. НЕ ВИКОРИСТОВУЙТЕ АБРАЗИВНІ МАТЕРІАЛИ.

## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

## CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

# 1

Shelf Holder  
Полкотримач



x8

L1


Telescopic Guide  
Напр. Біла  
400 мм



x2

NR 1


Screw  
Шуруп  
3,5x16



x16


W1

Mounting Plate  
Монтажна Планка



x4

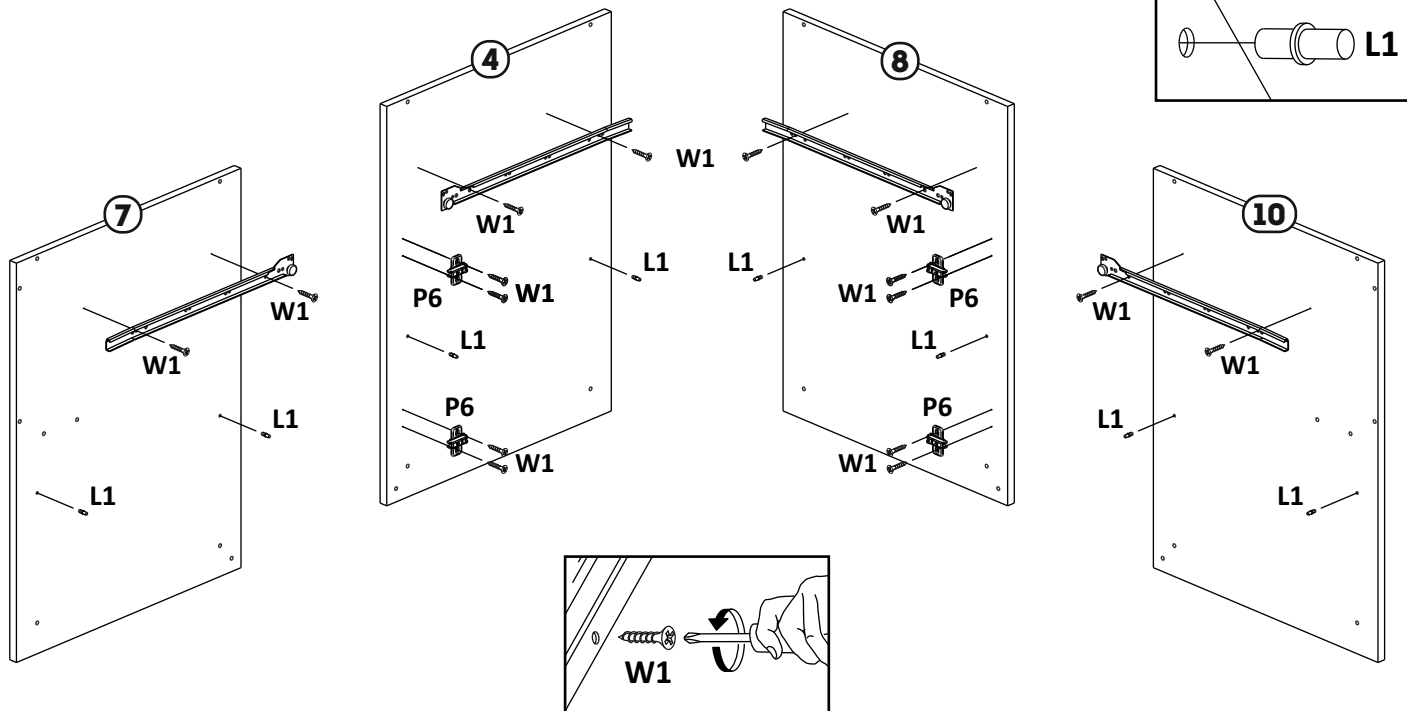
P6







**3**

Nail  
Цвях  
1x16




x66

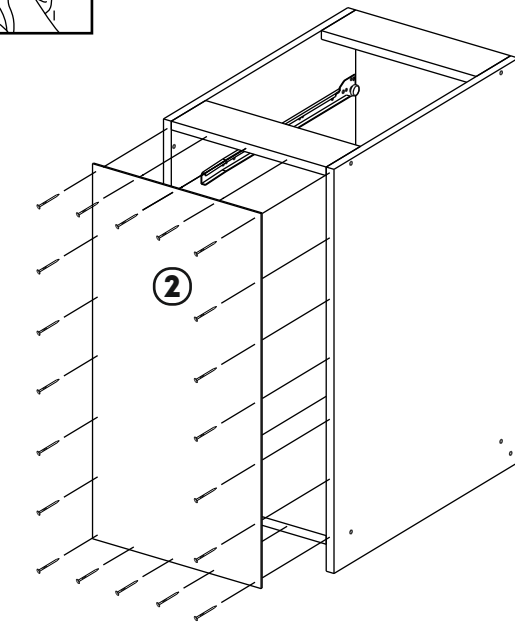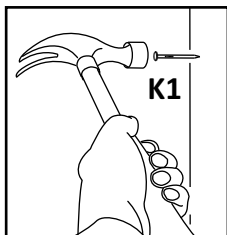K1




# 4

Confirmat  
Конфірмат




x8      A1

Support-lining  
Цвях опора




x8      Q3

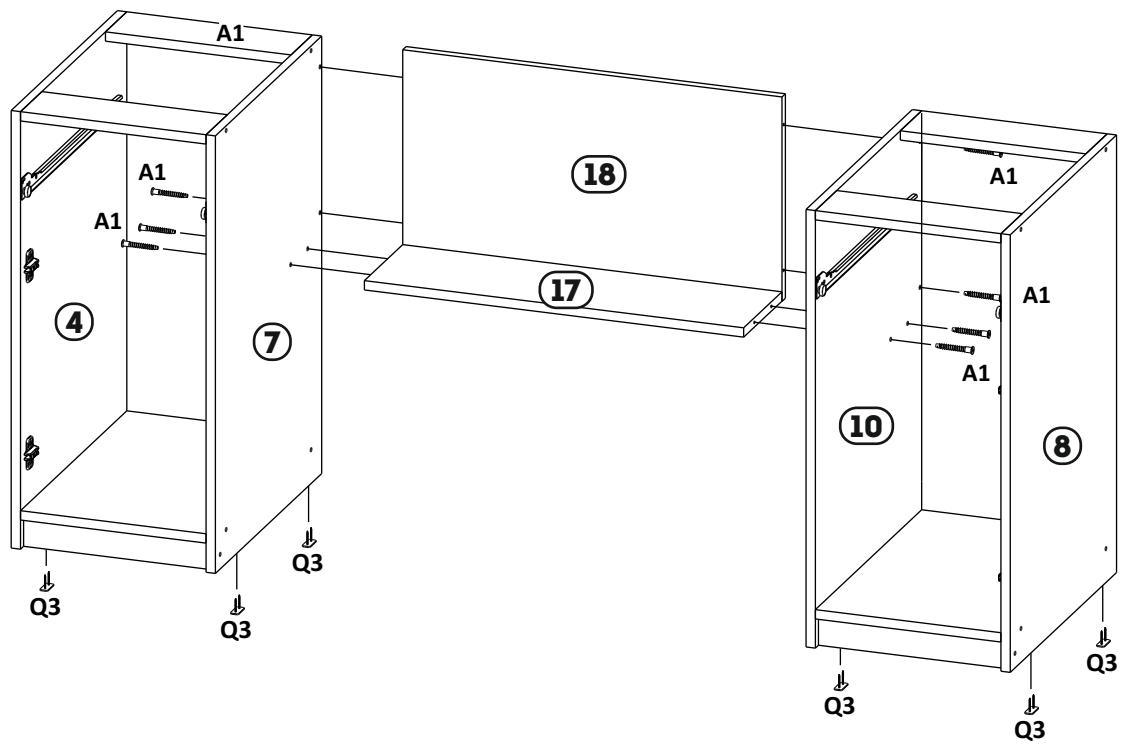




5









Screw  
Шуруп  
3,5x30



x12

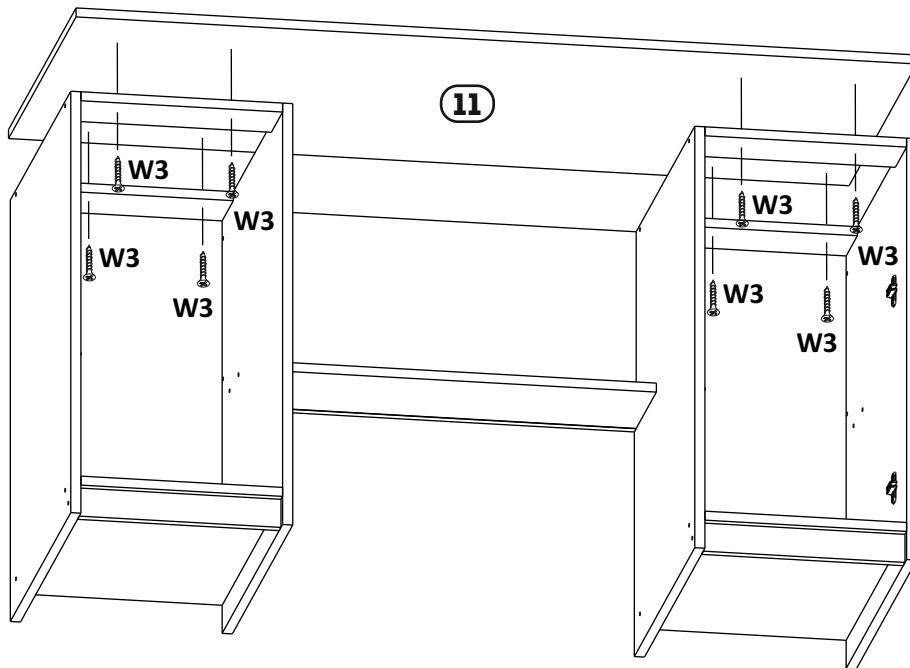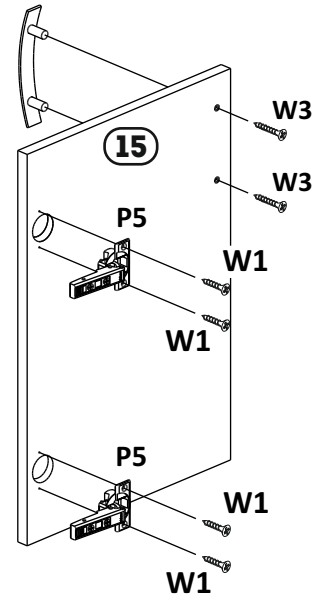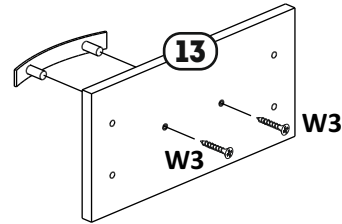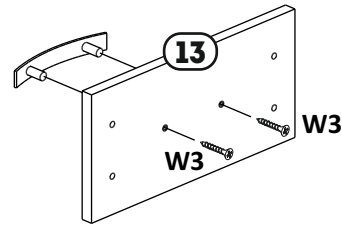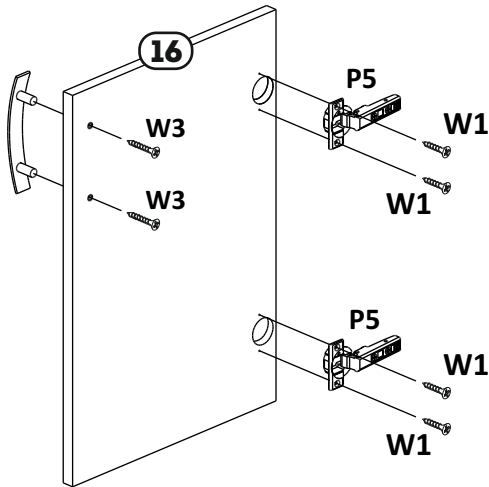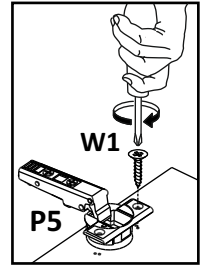
W3







**6**Screw  
Шуруп  
3,5x30**x8****W3**Plastic Handle  
Ручка пластик  
96 мм**x4****RP 1**Screw  
Шуруп  
3,5x16**x8****W1**Full Overlay Hinge  
Петля накладна**x4****P5**

**7**


Confirmat  
Конфірмат

**x4****A1**

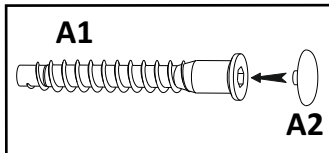
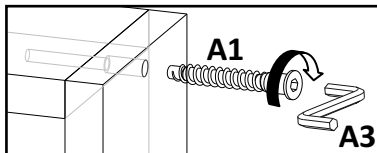
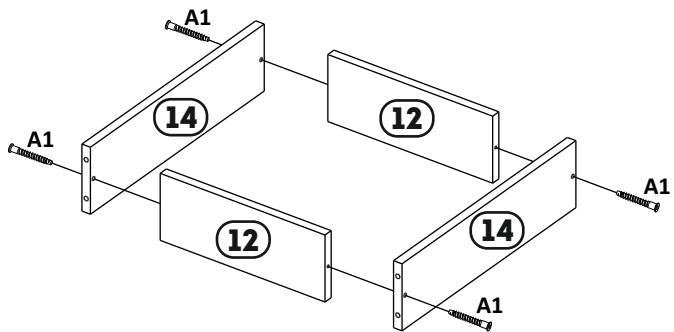
Cap for confirmate  
Заглушки для конфірмата

**x4****A2****8**

Dowel  
Шкант

**x4****C1**

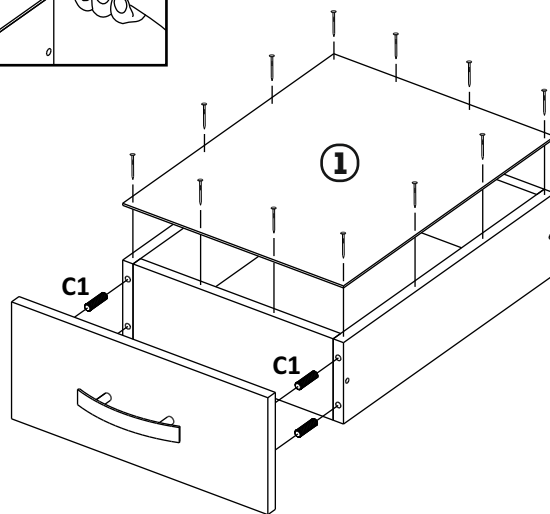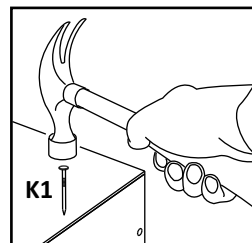Nail  
Цвях  
1x16




**x12****K1**

**9**

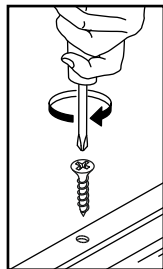
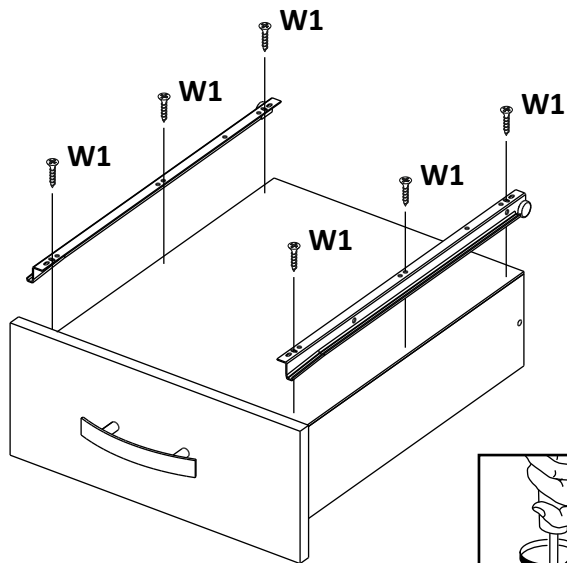
Telescopic Guide  
Напр. Біла  
400 мм





**x1****NR 2**

Screw  
Шуруп  
3,5x16

**x6****W1****10**

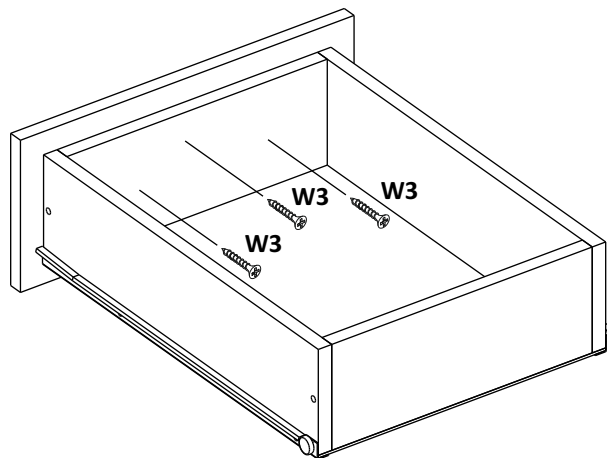Screw  
Шуруп  
3,5x30

**x4****W3**

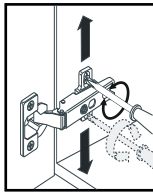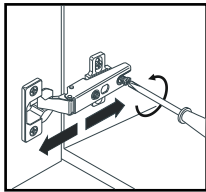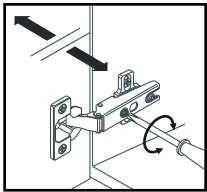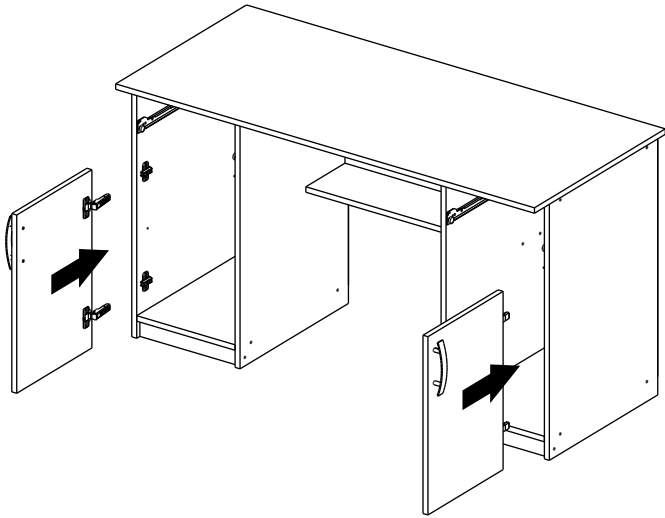**11****12**