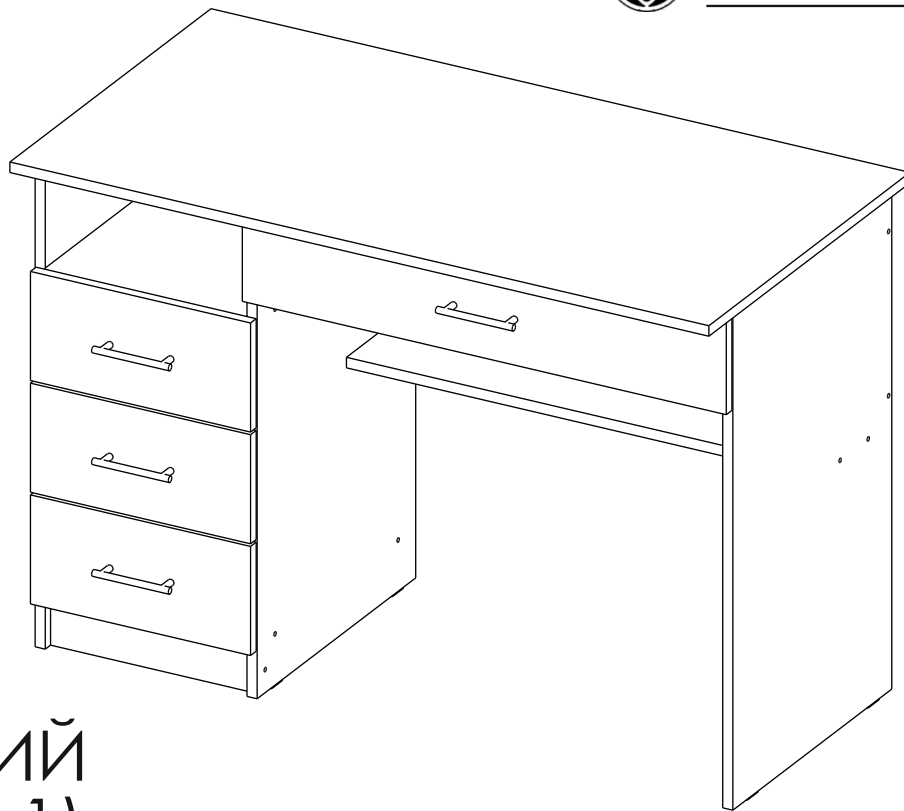


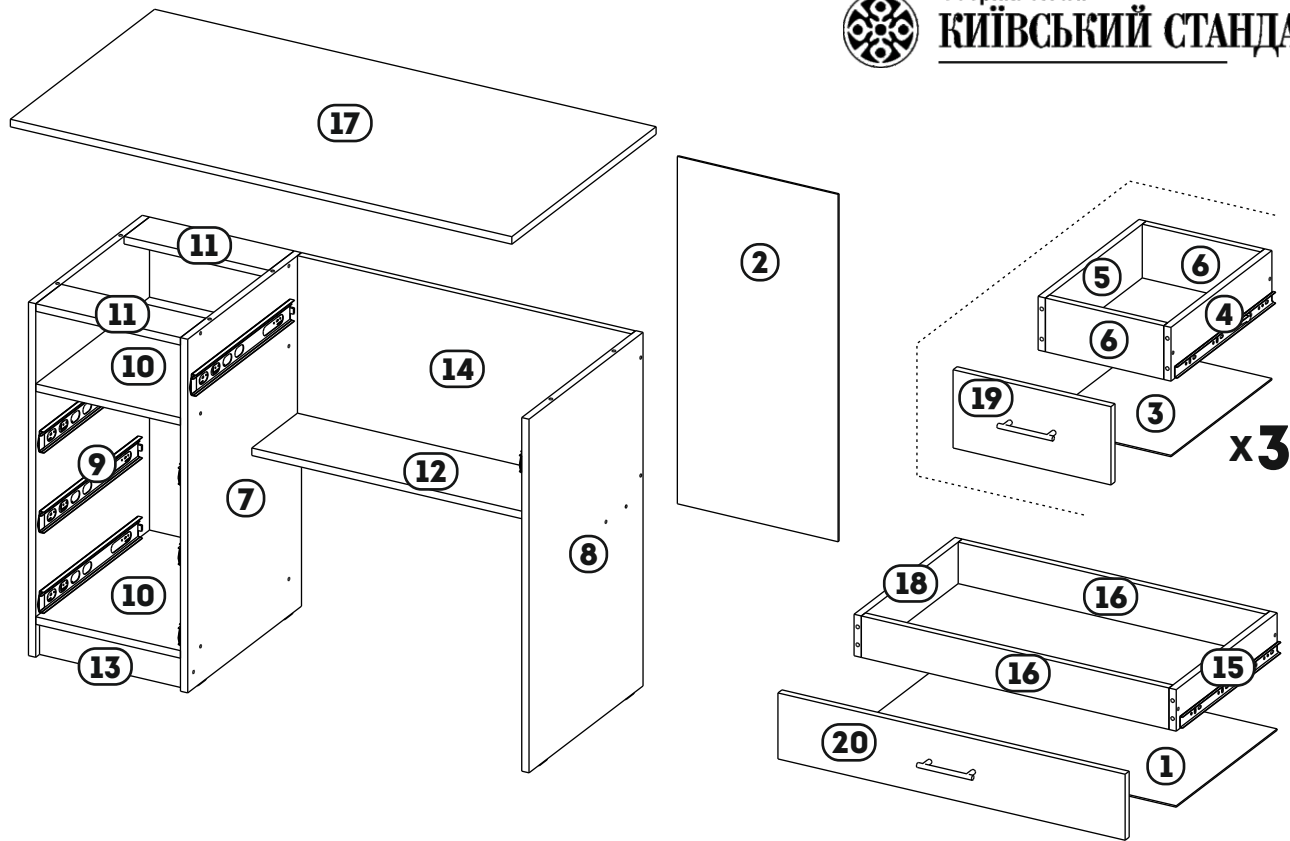


Фабрика меблів

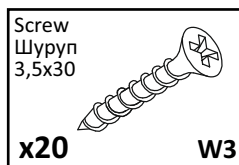
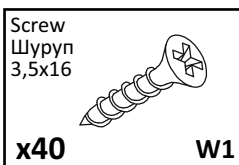
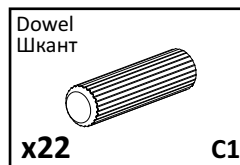
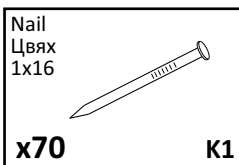
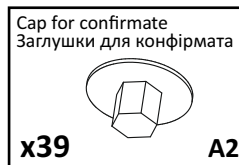
**КИЇВСЬКИЙ СТАНДАРТ**



**ОФІСНИЙ  
СТІЛ (№1)**

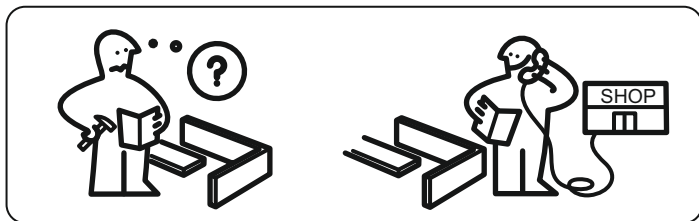
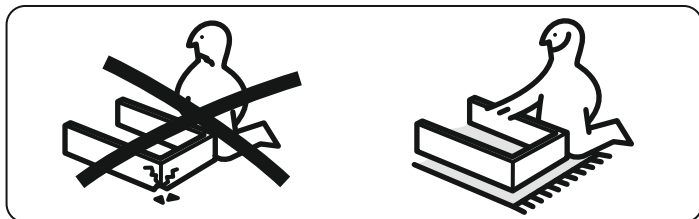
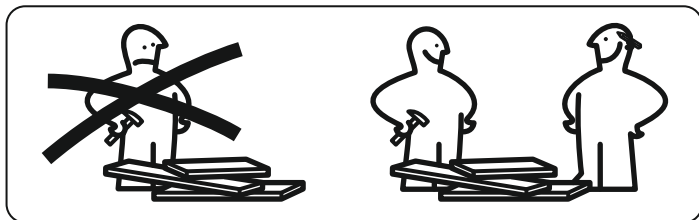


No	a*b	X
1	708x400	1
2	676x346	1
3	292x400	3
4	400x114	3
5	400x114	3
6	260x114	6
7	750x451	1
8	750x451	1
9	750x451	1
10	318x451	2
11	318x101	2
12	734x181	1
13	318x70	1
14	351x734	1
15	400x88	1
16	676x88	2
17	1102x572	1
18	400x88	1
19	166x347	3
20	140x763	1





Фабрика меблів  
**КИЇВСЬКИЙ СТАНДАРТ**



[kievstandart.com](http://kievstandart.com)

## ЗАГАЛЬНІ ТЕХНІЧНІ ВКАЗІВКИ ПО ЗБИРАННЮ МЕБЛІВ

- ПЕРЕД ЗБИРАННЯМ ПЕРЕВІРТЕ КОМПЛЕКТНІСТЬ ДЕТАЛЕЙ ТА ФУРНИТУРИ.
- ДЛЯ ЗБИРАННЯ МЕБЛІВ РЕКОМЕНДУЄМО СКОРИСТАТИСЬ ПОСЛУГАМИ КВАЛІФІКОВАНИХ СПЕЦІАЛІСТІВ.
- ДЛЯ ЗАПОБІГАННЯ ПОДРЯПИН ВИКОНУЙТЕ ЗБИРАННЯ НА ПОВЕРХНІ, ЯКА НАКРИТА ТКАНИНОЮ АБО КАРТОНОМ.

## ПРАВИЛА ДОГЛЯДУ ТА ЕКСПЛУАТАЦІЇ

- БЕРЕЖІТЬ МЕБЛІ ВІД ДОВГОГО КОНТАКТУ З ВОДОЮ ЧИ З ГАРЯЧОЮ ПАРОЮ.
- ЗАБЕЗПЕЧТЕ ДОСТАТНЮ ВІДСТАНЬ ВІД ЕЛЕКТРИЧНИХ ПРИЛАДІВ ТА ОБІГРІВАЧІВ.
- У РАЗІ ПОЯВИ БРУДУ НА МЕБЛЯХ ВИДАЛЯЙТЕ ЙОГО ВОЛОГОЮ ТКАНИНОЮ ІЗ НАСТУПНИМ ВИТИРАННЯМ НАСУХО. НЕ ВИКОРИСТОВУЙТЕ АБРАЗИВНІ МАТЕРІАЛИ.

## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

## CARE AND MAINTENANCE OF FURNITURE


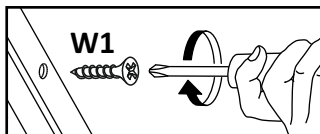
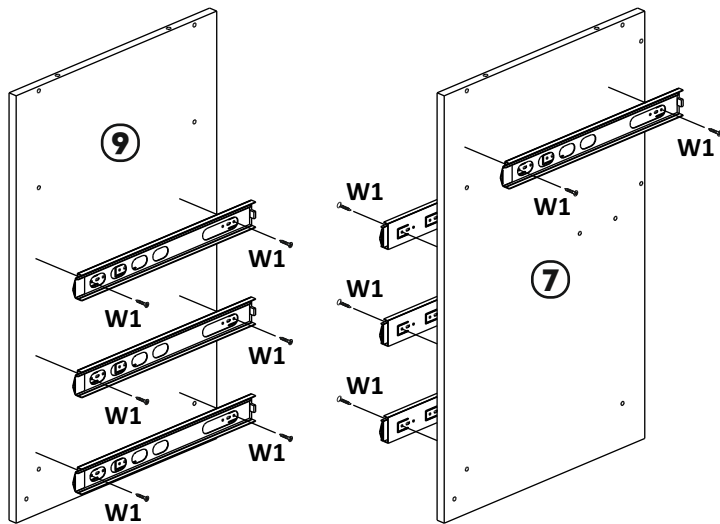
- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

**1**

Telescopic Guide  
Направляюча  
Телескоп.  
400 мм

**x4****NT 1**


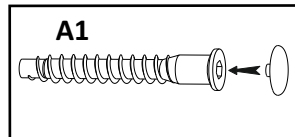
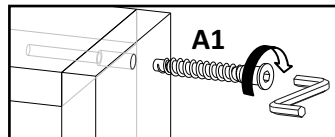
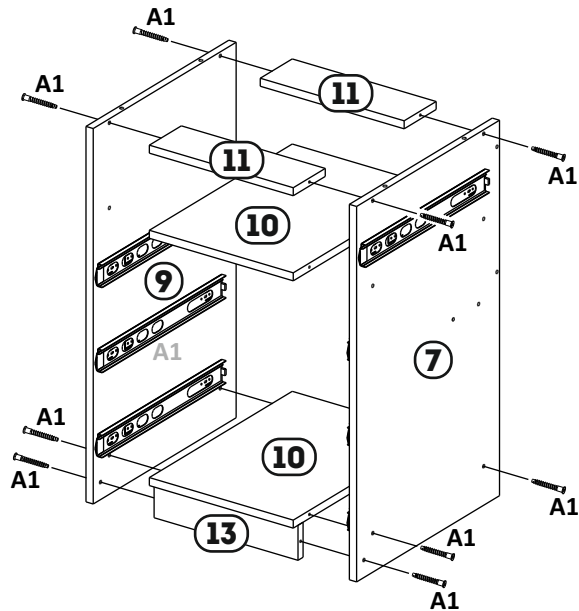
Screw  
Шуруп  
3,5x16

**x14****W1****2**

Confirmat  
Конфірмат


**x10****A1**

Cap for confirmate  
Заглушки для конфірмата

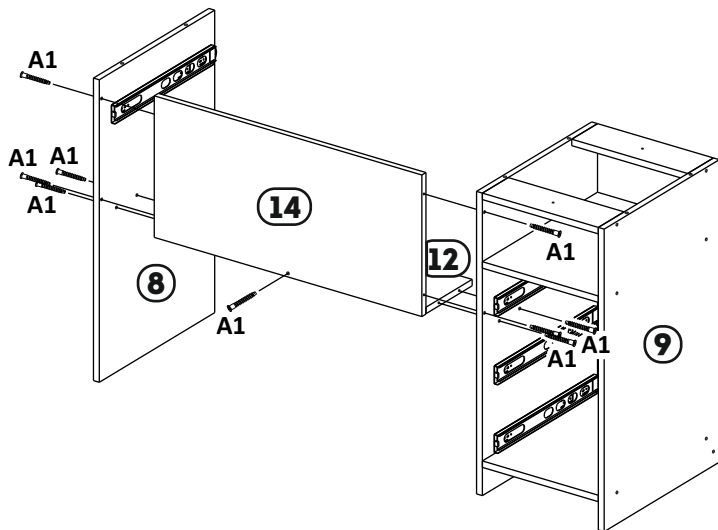
**x10****A2**

**3**


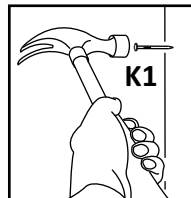
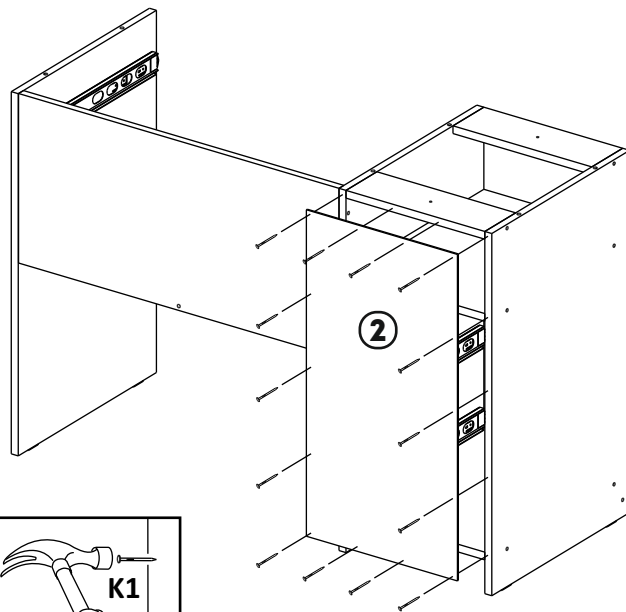
Confirmat  
Конфірмат


**x9****A1**

Cap for confirmate  
Заглушки для конфірмата

**x9****A2****4**


Nail  
Цвях  
1x16

**x34****K1**

**5**Dowel  
Шкант

x6

C1

Support-lining  
Цвях опора


x6

Q3

Angle Bracket  
Куточок Меблевий


x2

KT

Screw  
Шуруп  
3,5x16

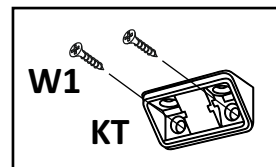
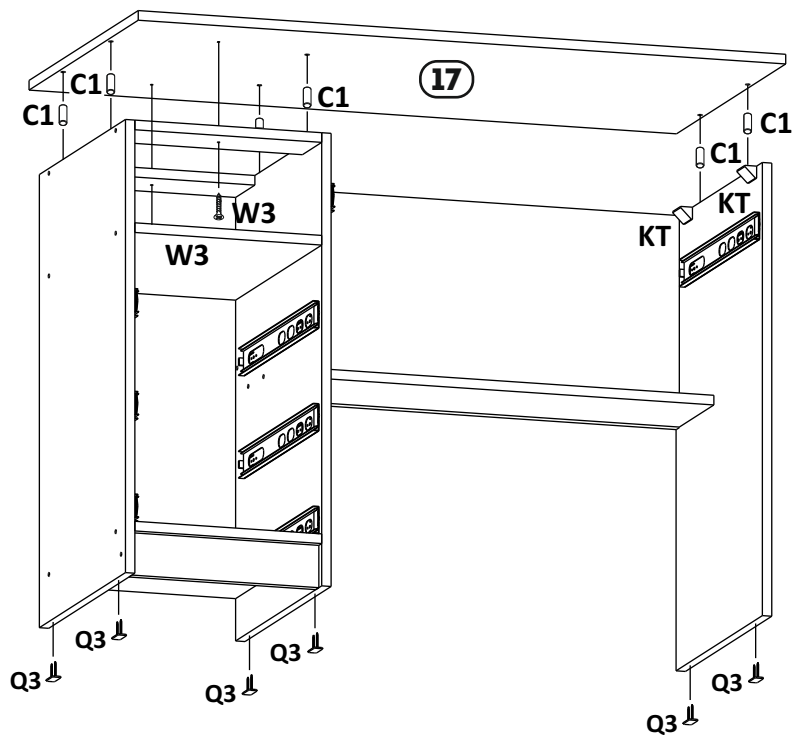
x4

W1

Screw  
Шуруп  
3,5x30


x2

W3


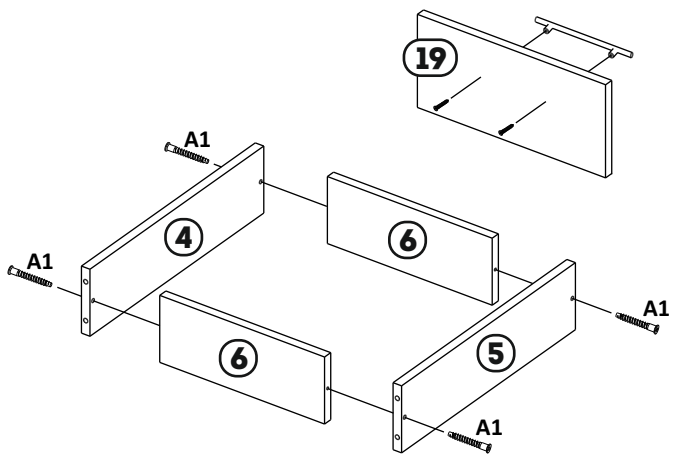
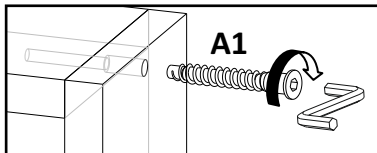
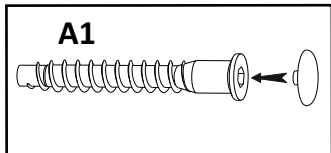


**6**


Confirmat  
Конфірма́т

**x4****A1**


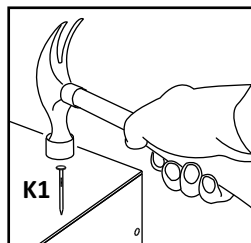
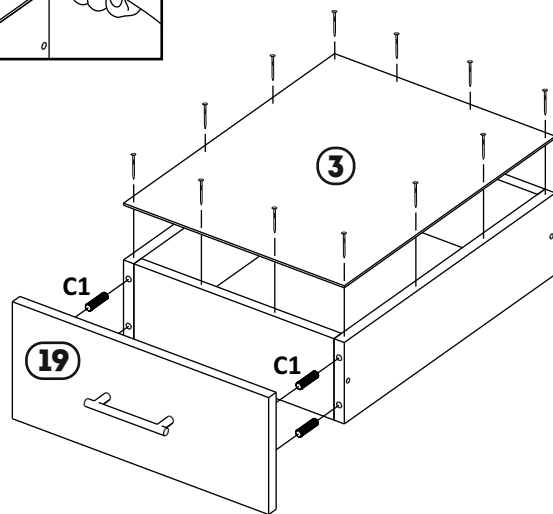
Railing Handle  
Ручка Рейлінг

**x1****RR 1****19****A1****4****6****A1****6****5****A1****A1****A1****7**



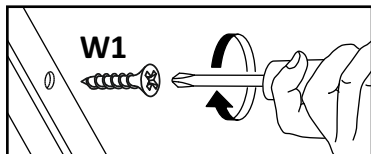
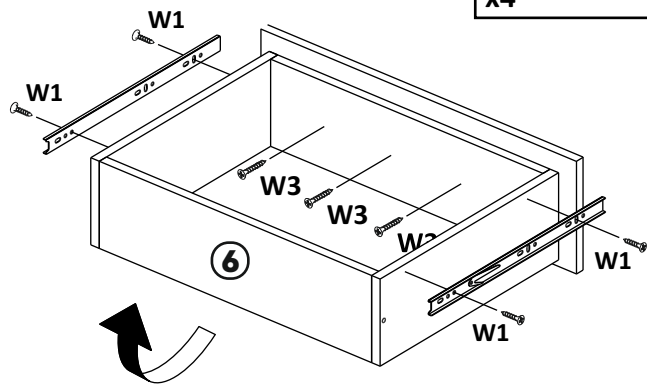
Dowel  
Шкант

**x4****C1**

Nail  
Цвях  
1x16

**x12****K1****K1****C1****19****C1****3**



**8**Screw  
Шуруп  
3,5x16**x4****W1**Telescopic Guide  
Направляюча  
Телескоп.  
400 мм**x1****NT 2**Screw  
Шуруп  
3,5x30**x4****W3****9**