

# ASSEMBLY INSTRUCTION FOR MDF-6-A9933-WSR300-BW2M

# DI TAVOLA


Notes:  
\* Please read carefully.  
\* Identify each component especially those that are similar.  
\* Separate and identify each component from the hardware pack and test each one in its proper position before fastening.  
\* Do not over tighten the screws or bolts when assembling.

2 Persons




**CAUTION**  
REFER THIS ASSEMBLY  
INSTRUCTION FOR ASSEMBLE

## Step 1

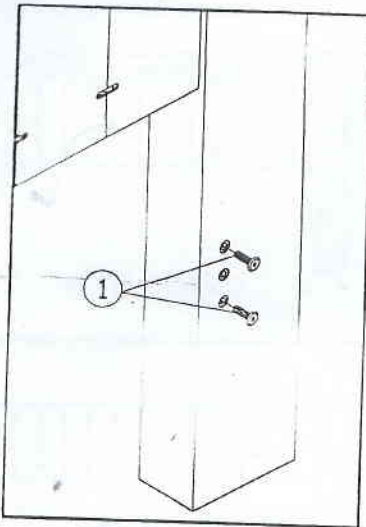


Fix screw '1' into position on wood post as shown.  
Important note : Do not tighten the screws yet!

## Step 2

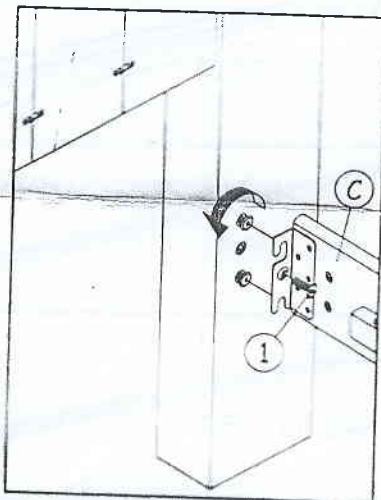


Hook the side rail to the bolt and fix center bolts '1' as shown.  
Important note : Do not tighten the bolts yet!

## Step 3

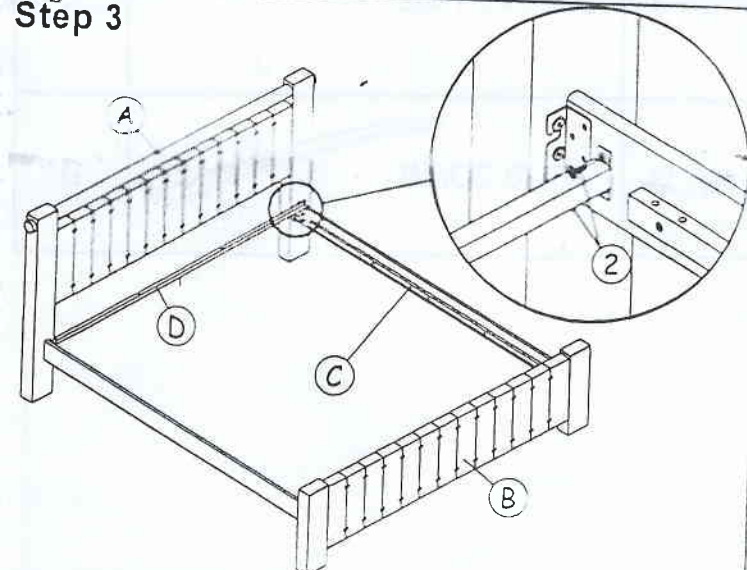


Fix cross bar 'D' to the side rail with bolts '2' as shown.

## Step 4

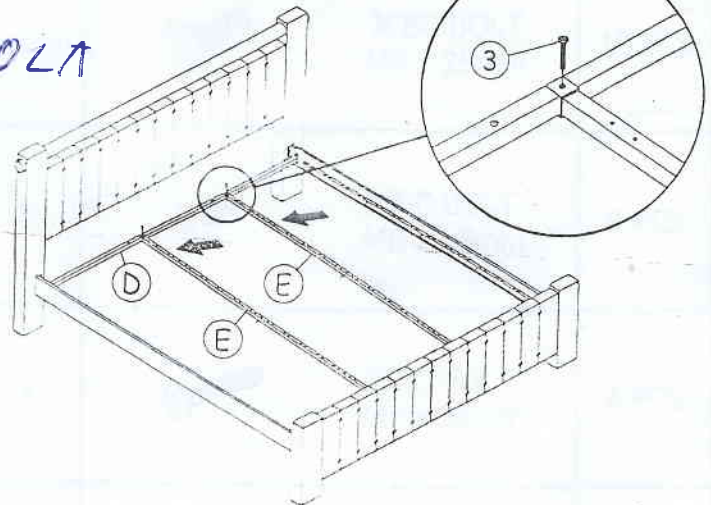


Fix center bar 'E' to the cross bar 'D' with bolt '3' as shown.

## Step 5

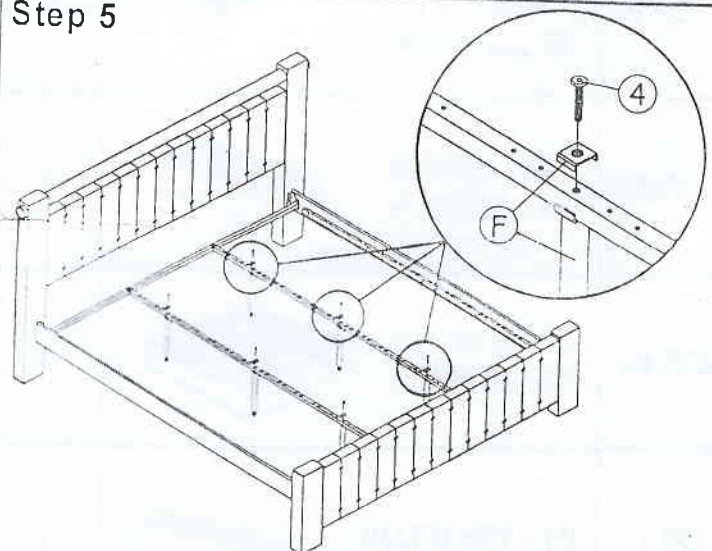

Fix bed support legs as shown.

## Step 6

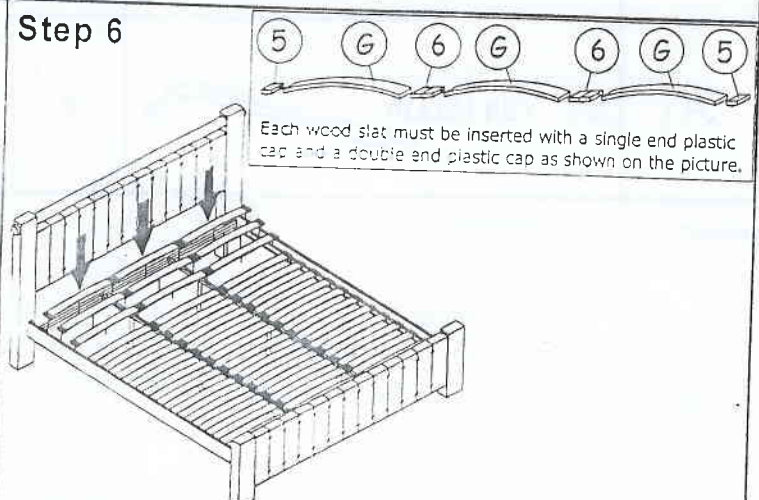

Each wood slat must be inserted with a single end plastic cap and a double end plastic cap as shown on the picture.

Once both wood slats have been inserted with the plastic caps, fix it on the wood side rails and center bar by pressing it accordingly to the default holes. Ensure the plastic caps pin is aimed to the holes.

Please follow our assembly instruction procedure for easier assemble.