
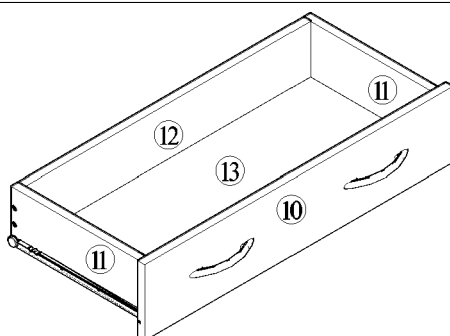
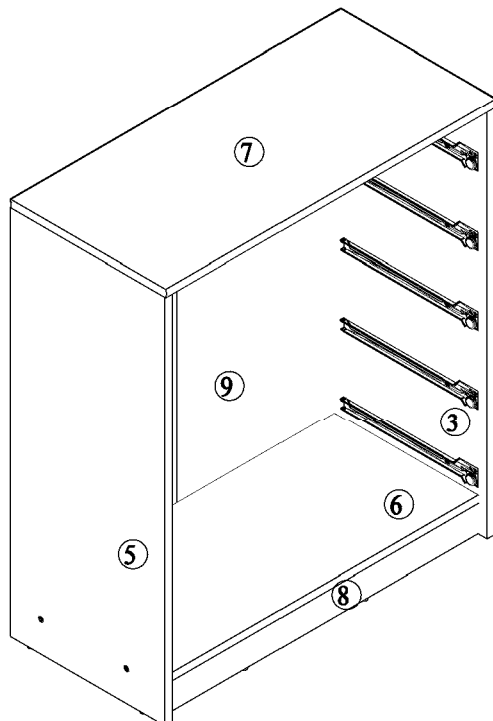
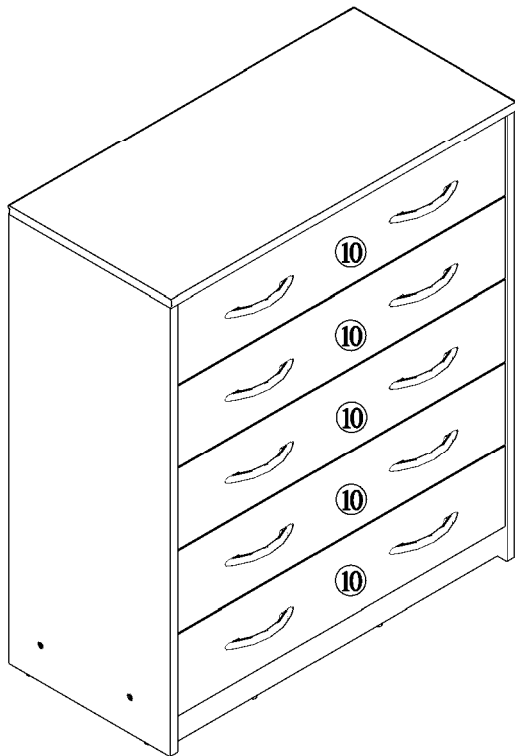


Montageanleitung

MODEL K15S

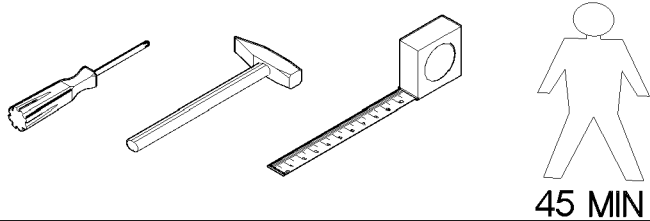

Q7	C	S1	H6
	 7x50		 4x40 US 031.03
x1	x4	x4	x20

W	E
x200	x5

P3	O2	H
	 6x13 034.05	 3.5x13 US 031.03
x10	x20	x20

A	glue
x32	x3

Z	D1
	 L=29mm
x4	x4

J7	J8
 3x30	
x20	x10