


METIN VNW15


Montážny návod

NO	Časti	QTY	NO	Časti	QTY
①	 33CM	40 ks	C	 4 ks	4 ks
②	 40CM	48 ks	D	 4 ks	4 ks
③	 60CM	6 ks	E	 2 ks	2 ks
A	 32 ks		F	 10 ks	
B	 8 ks		G	 1 ks	

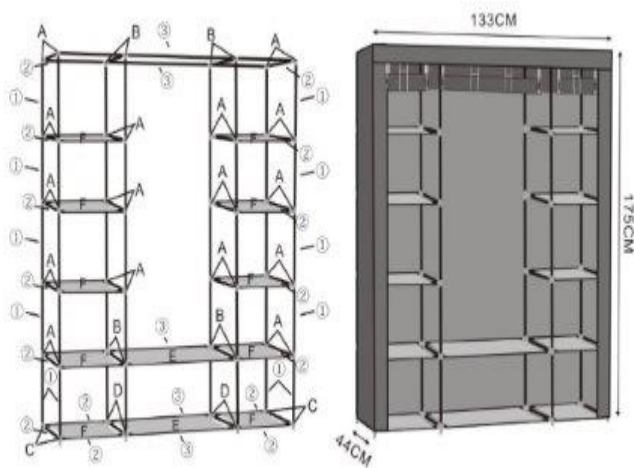

Montážny návod


krok 1




krok 2




krok 3



krok 4

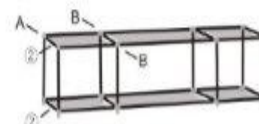

krok 5

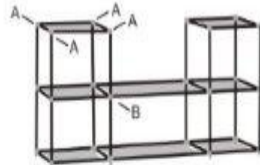

krok 6



krok 7



krok 8

